



ELSA ECOMO™ 21S99

User Manual

Copyright © 1998 ELSA AG, Aachen (Germany)

All rights reserved worldwide. No part of this publication may be reproduced, transmitted, transcribed, or stored in any information retrieval system, or translated into any human or computer language in any form or by any means without the express written permission by ELSA. It is against the law to copy this manual or the software, in part or whole, in any medium, for any purpose other than to aid the purchaser in the operation on a single computer system.

ELSA AG is a DIN EN ISO 9001 certified company. With the certificate of May 16, 1995, the authorized certification institute TÜV CERT has confirmed the conformity of ELSA AG with the worldwide quality standard DIN EN ISO 9001. The certificate number of ELSA AG is 09 100 5069.

Trademarks

All brands or product names are or may be trademarks of their respective owners. The ELSA logo is a registered trademark of ELSA AG, Aachen, Germany. ELSA reserves the right to vary specifications without notice and accepts no liability for technical errors and/or omissions.

Aachen, December 1998

Preface

Thank you for placing your trust in this ELSA product. With the *ECOMO 21S99* you have selected one of ELSA's high-end monitors. ELSA products are subject to the highest of standards in production and quality control which are the foundation for consistently high product quality. This monitor was especially designed for the demands of professional users, and distinguishes itself with an extraordinary degree of reliability.



If you have questions to the topics covered in this manual or require additional help, our online services are at your disposal around the clock. The complete range of support and services provided by ELSA can be found in the "Advice and Help" chapter.

In very urgent cases the ELSA Hotline can be reached under the following number:

+49-241-606-6135

**Before you continue**

How to set up your ECOMO 21S99 is described in the Installation Guide. Please refer to this information first before you start reading this manual.

Contents

Introduction	1
Monitor Features.....	1
Package Contents.....	2
CE Conformity and FCC Radiation Standard	3
The On-Screen Display.....	5
What You Need to Know	5
The Menu Pages	6
Aspects of Your Monitor	7
The Front Control Panel.....	7
Rear Connectors Panel.....	8
Monitor Settings	9
After Switching On.....	9
Plug&Play	9
Language.....	9
Overview of All Pages.....	10
Problems and Solutions	11
Characters Displayed are Barely Detectable or Almost Illegible	11
Centering/Moving the Picture.....	11
The Picture Does Not Fill the Entire Screen	11
The Picture Bows Inward or Outwards at the Edges.....	11
The Picture Tapers Towards the Top or the Bottom.....	12
The Picture is Slanted to the Left or Right.....	12
The Picture is "Askew"	12
The Picture Has a Wave-Like Pattern Superimposed On It.....	12
The Picture Has Blue or Red Shadows	13
The Screen Colors Look Blotchy.....	13
Printer and Screen Colors Should Match.....	14
Options	14
Degaussing.....	14
Selecting the Monitor Input.....	14
Positioning the On-Screen Menu	14
Let the Monitor Rest while Inactive	15
Locking the Control Functions.....	15
Resetting the Values to the Factory Settings	15
An Optimized Working Environment	17
Monitor Picture Quality.....	17
Tips for an Ergonomic Working Environment	17
Lighting in your Working Environment.....	17

The Work Desk.....	18
The Seating Position	18
The Monitor Position	18
Cleaning your Monitor	18
Technical Data	19
Power Management Function.....	20
Factory Settings	20
The VGA D-Shell Socket	20
Video Input Connection to an Apple-Macintosh Computer	21
Troubleshooting	23
Problem Solving	23
On-Screen Messages.....	25
Self-Diagnosis Function of the Monitor	25
If the Power Indicator Lights Up Green	25
If the Power Indicator Flashes Orange	25
Appendix	27
TCO '95 - Ecological Requirements for Personal Computers	27
Why do we have Environmentally-Labeled Computers ?	27
What does Labeling Involve ?	27
Environmental Requirements.....	28
Advice and Help.....	30
Software Updates	30
Who to Contact?	30
ELSA-ServiceDirect for ELSA ECOMO™ Monitors	32
Warranty Conditions	33
Index	35

Introduction

Monitor Features

The main features of the *ELSA ECOMO 21S99* are described below to give you an overview of the monitor's capabilities.

On-Screen Display

Settings for the monitor can be adjusted quickly and easily using the on-screen display menu.

Multi-mode technology

The multi-mode technology is controlled by the microprocessor. The monitor synchronizes itself automatically to all frequencies in the horizontal range between 30kHz and 96kHz, and in the vertical range between 48Hz and 160Hz. Microprocessor control allows the monitor to operate in any frequency mode with the precision of a fixed-frequency monitor.

Storage for graphics modes

Besides the factory settings for popular display standards, the *ECOMO 21S99* can store user-defined settings and other timings.

Dynamic focus

The distance over which the electron beam is projected varies considerably over the width and height of the screen, an effect which is especially significant with larger monitors. The dynamic focus function automatically adjusts the focal length of the beam to ensure that the picture stays sharp, even at the outer edge.

Moiré correction

An adjustable Moiré correction compensates for the unwanted wave-like interference patterns from background rasters.

TCO '95 - The latest standard

Your ELSA monitor complies with the CE radiation norm which officially defines criteria for safety and electromagnetic compatibility. The TCO '95 and similar approvals additionally define the conditions for visual ergonomics, low radiation, energy saving functions and ecology. Thus the *ECOMO 21S99* meets all the requirements laid down in the EU Directive 90/270/EEC for monitors in the working environment.

Plug&Play (DDC)

The *ECOMO 21S99* is equipped with the DDC1 and DDC2B functions (DDC = Display Data Channel), which the monitor can use to transmit information (e.g. graphics modes supported and timing) to the host computer. This system works only if the host computer (the graphics card) also supports the DDC function.

Power management (VESA DPMS)

The monitor has a power saving function which reduces the power consumption in stages if the monitor is not in use.

Macintosh and the ELSA monitor

ECOMO 21S99 is a multi-frequency monitor which can also be connected to Apple Macintosh computers. A suitable adapter is required to make this connection.

Package Contents

Please check that nothing is missing from the package contents. When opening the package please ensure that the following components are included:

- Installation Guide
- Manual
- Monitor
- VGA connector cable
- Power cord
- *WINNERware*-CD with INF files

Please contact your dealer if any items are missing or damaged.

ELSA reserves the right to make changes to the package contents without prior notice.

CE Conformity and FCC Radiation Standard

CE

This equipment has been tested and found to comply with the limits of the European Council Directive on the approximation of the laws of the member states relating to electromagnetic compatibility (89/336/EEC) in accordance with EN 55 022 class B.

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the Federal Communications Commission (FCC) Rules.

CE and FCC

These limits are designed to provide reasonable protection against radio frequency interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may interfere with radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception (this can be determined by turning this equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between this equipment and the receiver.
- Connect the equipment to an outlet on a circuit other than that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician.
- Caution: Always use a shielded signal cable to comply with the requirements for an FCC Class B computing device.



Caution to the user: The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The On-Screen Display


The on-screen menu – On Screen Display (OSD) – makes fine tuning the picture on your monitor easy. The possible settings range from simple brightness adjustment to detailed correction of pin-cushion curvature or distortion. The on-screen display appears as soon the 'Menu' button on the control panel is pressed. Once in the on-screen display, you can use the buttons to access the various pages of the menu.

What You Need to Know

You need to know the buttons for navigating within the pages and from one page to another. You should bear the following in mind if you wish to adjust the monitor settings





Use the menu button to call up the on-screen menu overview page.

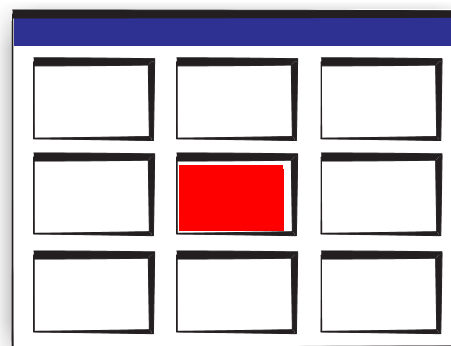

The active setting is always displayed in yellow. Use the appropriate arrow key to move the setting. Use the 'Menu' button to confirm the selection of a menu page.

Use the arrow keys to move the selection to the screen page you want

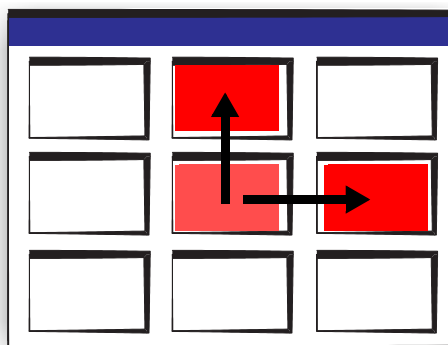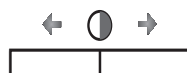


Use the Option button to confirm selection of that page.



The 'Option' button performs a simple function. It is used to call up the on-screen menu and to confirm a selection and settings on a menu page. Also: to close the on-screen menu afterwards.

The Menu Pages

The OSD of your *ECOMO 21S99* contains various menu pages. We will now show you how to navigate around the pages, what they look like and how to adjust values:

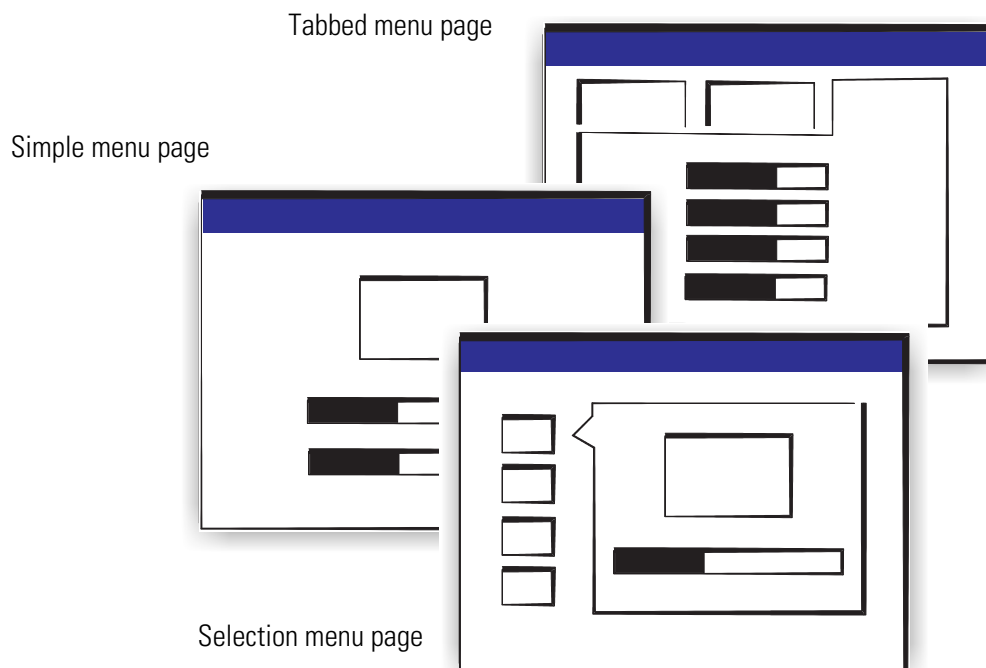


There are three different types of page.

- **Simple menu page** – provides you with one or more slider bars and a preview to help you check the setting. Use arrow keys \leftarrow/\rightarrow to change the values.
- **Selection menu page** – the left-hand side of this page shows the various setting options. Use arrow keys \uparrow/\downarrow to select the setting options. The possible settings or values appear on the right-hand side, depending on option selected. Use the \leftarrow/\rightarrow buttons to change or toggle the settings
- **Tabbed menu page** – this page uses the \leftarrow/\rightarrow buttons to select tabs. Use the \uparrow/\downarrow buttons to move between the setting options on the tabs. The values themselves can in turn be changed using the \leftarrow/\rightarrow buttons.

Aspects of Your Monitor


The Front Control Panel

The lower front of the monitor features a row of switches and buttons which allow you to tune the picture settings precisely.

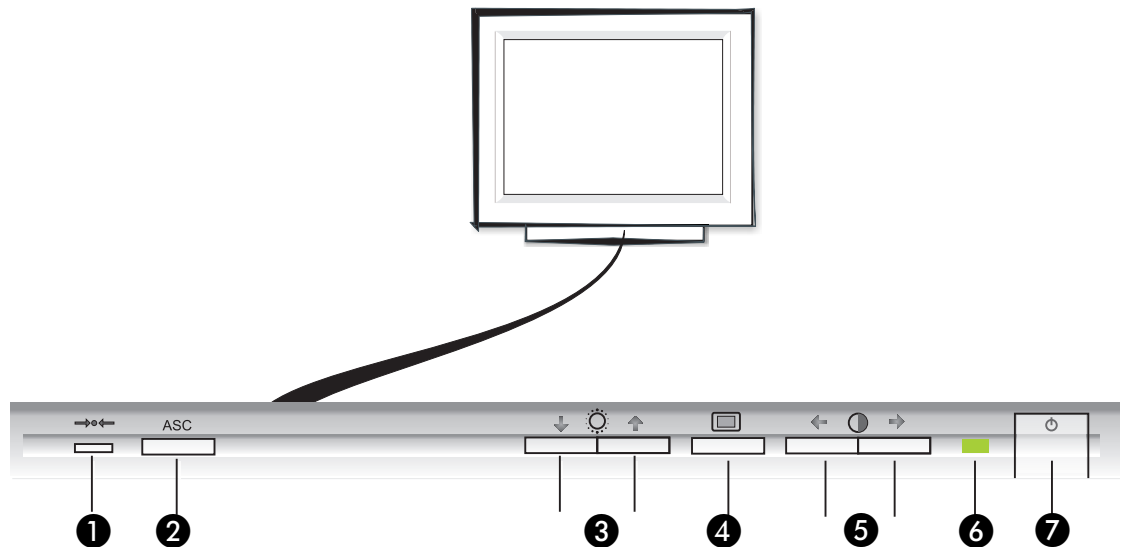

	Function
①	Reset button Resets the values to the factory settings
②	Quick align The ASC button (Auto Sizing and Centering) automatically centers the picture. At the same time the picture size is adjusted to fit the diagonals of the monitor.
③	Brightness Use the two arrow keys to adjust the brightness of the picture. The arrow keys are used to move the cursor in the on-screen menu and alter the settings.
④	Menu button The menu button is the central control button for the on-screen menu: Pressing it opens and closes the on-screen menu and confirms the settings made on an on-screen menu page.
⑤	Contrast Use the two arrow keys to adjust the picture contrast. The arrow keys are used to move the cursor in the on-screen menu and alter the settings.
⑥	Power indicator The indicator lamp lights up when the monitor is switched on and indicates the status of the energy saving function (20)).
⑦	Power switch Used to switch the monitor on and off

Rear Connectors Panel

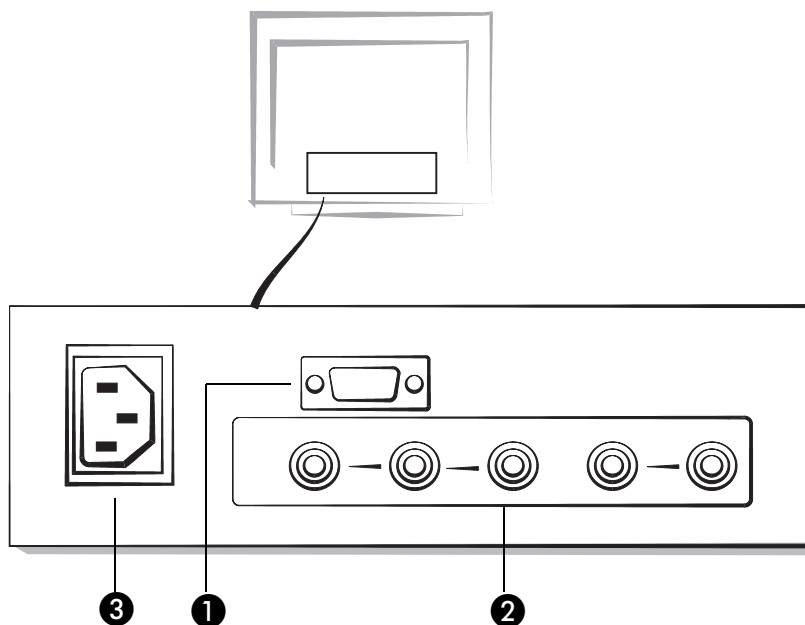

	Function
①	Video input 1 connector (HD15) Plug the cable carrying the signal from the graphics board to the monitor into this socket
②	Video input 2 connector (BNC) A special BNC cable must be connected to these five sockets to connect the monitor to the graphics board signal.
③	AC IN connector Plug the power cord in here.



DDC is only possible using the video input 1 connector; this allows the ECOMO 21S99 data to be read.

Monitor Settings

The monitor settings can be fine tuned according to your preferences. Don't be afraid to experiment with the monitor and try out all of the options for adjustment. If the picture has gone completely astray, just press the RESET "emergency button" to restore the factory settings (→page15).

After Switching On

Plug&Play

Today's graphics boards, and the *ECOMO 21S99*, are capable of communicating using DDC (Display Data Channel). The *ECOMO 21S99* can send its parameters to the graphics board. In turn, the graphics board ensures that the monitor operates at the highest possible refresh rate for the resolution selected. This means that you will normally get a picture straight away that needs only minor adjustments. Check the fine tuning of the picture and adjust the picture for the relative light levels of your working environment.

You will now find out what settings are possible and how to solve any problems.



























Language

The *ECOMO 21S99* can display its on-screen menus in a choice of languages. If you want to change the language used for the on-screen menu, simply call up the menu page illustrated here and select the language you want.



Overview of All Pages

The following overview has been drawn up to help you navigate your way through the nine menu pages and their contents.

Menu Page	Brief Description		Details
 COLOR	Sets the color temperature		page 14
 GEOMETRY		Compensates for rotation	page 12
		Pincushion	page 11
		Pincushion balance	page 11
		Trapezoidal distortion	page 12
		Trapezoidal balance	page 12
 LANG	Language selection (English, French, Dutch, Spanish, Japanese)		page 9
 POSITION	Sets the horizontal and vertical position of the picture		page 11
CLOSE		Closes the on-screen menu	—
 SIZE	Adjusts the size of the picture		page 11
 SCREEN		Horizontal convergence correction	page 13
		Vertical convergence correction	page 13
		TOP Top convergence correction	page 13
		BOT Bottom convergence correction	page 13
		Selects a region of the screen for color purity correction	page 13
		ADJ Adjusts color purity	page 13
		Moiré correction	page 12
 ZOOM	Enlarges or reduces the picture proportionally		page 11
 OPTION		Manual degauss	page 14
		Selects the monitor input	page 14
		Positions the on-screen menu (horizontally)	page 14
		Positions the on-screen menu (vertically)	page 14
		Sets the energy-saving function	page 15
		Locks the control panel	page 15

Problems and Solutions

In this chapter you will find all the information you need for adjusting the picture and using the monitor functions. Please refer to page 5 if you are not sure how to operate the on-screen menu.

Characters Displayed are Barely Detectable or Almost Illegible

*Picture
Brightness and
Contrast*


Brightness and contrast can be adjusted directly using the arrow keys on the front of the monitor.



Centering/Moving the Picture

Picture

Use the selection keys to access the 'POSITION' menu page and correct the setting using the and buttons.

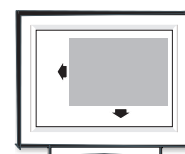


Pressing the ASC button automatically fits the size of the picture to the monitor and at the same time centers the picture.

The Picture Does Not Fill the Entire Screen

Picture Size

Use the selection keys to access the 'SIZE' menu page and correct the setting using the and buttons.

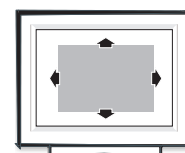

Another possibility is to use the ZOOM function. This allows you to enlarge and reduce the picture proportionally.




Pressing the ASC button automatically fits the size of the picture to the monitor and at the same time centers the picture.

The Picture Bows Inward or Outwards at the Edges

*Pincushion or
Barrel Distortion*


Use the selection keys to access the 'GEOM' menu page. Move the cursor onto the desired option using the buttons. Try altering the setting for 'PINCUSHION' or 'PINCUSHION BALANCE' to correct the pincushion effect. Use the buttons to adjust the picture geometry.

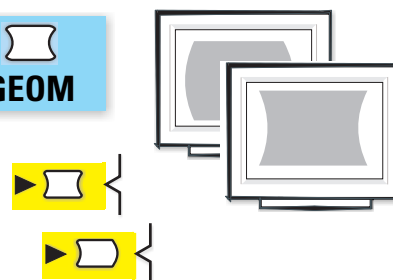

The Picture Tapers Towards the Top or the Bottom

Trapezoidal


Use the selection keys to access the 'GEOM' menu page. Move the cursor onto the desired option using the $\blacktriangle/\blacktriangledown$ buttons. Change the setting for 'TRAPEZIUM' to correct the trapezoidal effect. Use the $\blacktriangleleft/\blacktriangleright$ buttons to change the picture geometry.

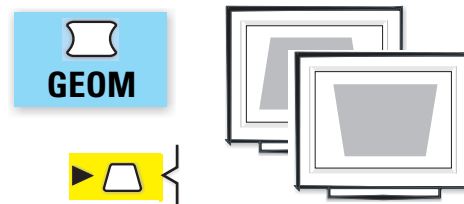

The Picture is Slanted to the Left or Right

Picture Slant


This effect is also known as "Trapezium balance". Use the selection keys to access the 'GEOM' menu page. Move the cursor onto the desired option using the $\blacktriangle/\blacktriangledown$ buttons. Try changing the setting for 'PINCUSHION' or 'PINCUSHION BALANCE' to correct the pin-cushion effect. Use the $\blacktriangleleft/\blacktriangleright$ buttons to adjust the settings.

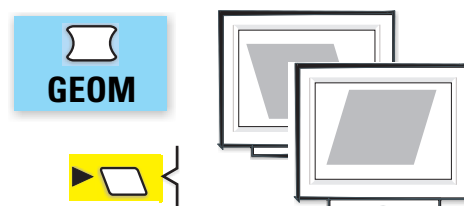

The Picture is "Askew"

Picture Rotation

Use the selection keys to access the 'GEOM' menu page. Move the cursor onto the desired option using the $\blacktriangle/\blacktriangledown$ buttons. You can use the $\blacktriangleleft/\blacktriangleright$ buttons to rotate the picture and correct the rotational effect.

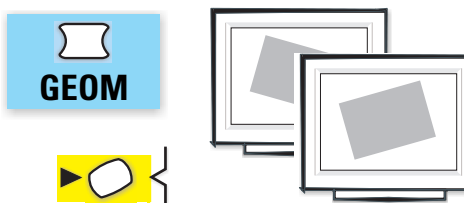


The Picture Has a Wave-Like Pattern Superimposed On It

Moiré Correction

Modern monitors are affected by the undesirable side-effect of moiré. This is particularly noticeable with a light background screen brightness and can often be eliminated by selecting another background color. This effect produces an interference pattern which results from a displacement between the electron beams and the shadow mask. Beam point and shadow mask converge precisely in some parts of the screen, producing a bright picture. Minor deviations make for a somewhat darker region in other parts of the screen.

Use the selection keys to access the 'PICTURE' menu page. Move the cursor onto the desired option using the $\blacktriangle/\blacktriangledown$ buttons. Change the setting for 'MOIRE' using the $\blacktriangleleft/\blacktriangleright$ buttons to correct the effect of moiré.

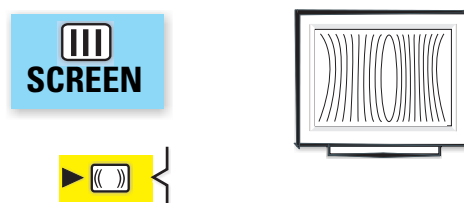

The Picture Has Blue or Red Shadows



Convergence

The three electron beams are not in registration and are not hitting the phosphor dots on the viewing screen accurately, resulting in a fuzzy picture on the screen and the appearance of red or blue shadows around objects. This is called convergence error. The three control bars on the OSD page will help to adjust the convergence. The convergence value is correct when the color bars are "sharp".

The *ECOMO 21S99* makes it possible to correct the convergence very accurately:

- Vertical convergence
- Horizontal convergence
- Upper screen convergence
- Lower screen convergence

Use the selection keys to access the 'PICTURE' menu page. Move the cursor onto the desired option using the / buttons. Use the / buttons to adjust the convergence correction.

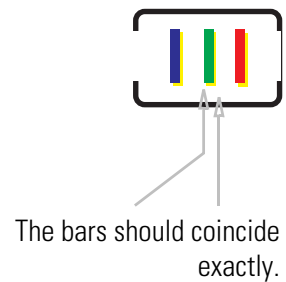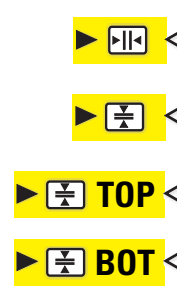

The bars should coincide exactly.

H convergence
(horizontal)

V convergence
(vertical)

H CONVER TOP
(top horizontal convergence)

V CONVER BOTTOM
(bottom vertical con-

The Screen Colors Look Blotchy

Color Purity


Colors will lose uniformity if the three electron beams are being deflected. This effect may be the result of interference from a magnetic field or if the monitor has been moved while switched on. The *ECOMO 21S99* allows the grade of color purity to be adjusted in all four corners of the screen.

Use the selection buttons to access the 'PICTURE' menu page.

- ① First move the cursor onto the first 'COLOR PURITY' symbol using the / buttons. The four icons for the corner regions affected appear in the right-hand detail. Select the icon you want using the / buttons. The selection is highlighted by a small green square.



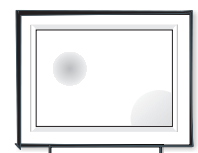


Color imbalances in the monitor picture



First select the corner region that needs correction...



and then adjust the color purity for this region.

- ② Now highlight the next selection by pressing button . You can adjust the color purity value using the / buttons.

Printer and Screen Colors Should Match

Color Temperature

Color temperature setting enables you to set up your monitor's background white to match the white of the printer paper. You can match the colors on screen to match printed output or some other color swatch. The lower the value, the brighter the paper quality.

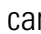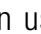Use the selection buttons to select the next menu page, 'COLOR'. You can use the / buttons to switch between the three color temperatures, 5000K, 6500K and 9300K, where 6500K represents the value for default white. The screen picture changes at the same time.



Selection of tabs with the three color temperatures

If you are an experienced user and need to match the screen picture very closely to a color swatch, it is possible to match the black proportion (BIAS) and the white proportion (GAIN) of each of the three color temperatures for the red, green and blue (RGB) color signals.

Options

You will find additional settings and functions for the monitor in the 'OPTION' menu.



Degaussing

The monitor screen is automatically degaussed whenever it is turned on. You can, of course, manually degauss the monitor.



Selecting the Monitor Input

You can connect two computers to the *ECOMO 21S99*. You can determine the computer from which the video signal is received by selecting the input. Please note that DDC functions are only available on video input 1.



Positioning the On-Screen Menu

The on-screen menu can be positioned anywhere along the horizontal and vertical axes using the appropriate keys.



Let the Monitor Rest while Inactive

Power Management Function

The *ECOMO 21S99* has a three-stage power saving function 20). You can use the on-screen menu to set the delay time before the power saving function activates.




Locking the Control Functions

Keyboard Lock

You will no longer be able to select any of the functions, except for the menu button and the 'Option' menu page if access to the on-screen menu has been locked. This also applies to the control panel buttons on the front of the monitor. A green key icon appears in the bottom left corner of the screen if you attempt to change a setting.

The key icon tells you that:
The keyboard function for setting is locked.

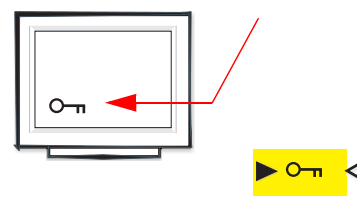

Resetting the Values to the Factory Settings

You can use the reset button to return all settings you have changed back to the factory settings. This applies for

- each individual setting
- all settings for the current input signal
- all settings for both input signals

Access the relevant menu page and highlight the individual setting you want to reset.

Briefly press the reset button when you are not on a menu page to reset the settings for the current input signal. The values for both inputs can be reset by pressing the button for more than 2 seconds. The following settings will remain unchanged

- Language of the on-screen menu
- Position of the on-screen menu
- Input signal
- Keyboard lock

Notes

You can use the reset button to undo any settings which have "gone astray".



An Optimized Working Environment

You have already taken a significant step towards this goal: you have acquired a monitor with technology guaranteeing optimized ergonomics and a minimum of stress at your place of work. Equally important is the overall arrangement of your working environment, which includes some basic rules about working with a monitor.



The ELSA ECOMO 21S99 complies with the latest EU ergonomics guidelines (90/270/EEC) for work places with monitors, which came into effect on the 1.1.97.

Monitor Picture Quality

The screen must display a stable picture. How can you check this? Simply focus on a fixed point next to your screen. If you can see a perceptible flickering of the picture, you can try and adjust the brightness and contrast to stabilize the picture. If this does not help, then try to increase the display refresh rate with your graphics card driver.

Tips for an Ergonomic Working Environment

Lighting in your Working Environment

The lighting in your place of work should not perceptibly flicker. Avoid placing monitors directly next to windows and be sure that there is the possibility to reduce the intrusion of strong sunlight such as with a blind. When arranging desks, make sure that the direction of view is parallel with the lighting. The direction of view to the monitor should be parallel to the windows. Glare and reflections can be reduced by an anti-reflective layer (Lambda/4 anti-reflection) on the screen.

You can check whether or not your place of work meets these basic rules:

- Are you facing a window when looking at your monitor?
- Does your monitor screen show any reflections from windows or lighting?

The Work Desk

The top of the work desk should be at a height of 72 cm. The desk top should be around 80 cm deep and of sufficient length. There should be a suitable separation between the operator and the monitor which, for a 17" monitor, is recommended to be at least 45 cm and for a 21" monitor, should be about 80 cm.

The Seating Position


The seating position is most important for work in comfort and without problems. A rule of thumb is: sit with a straight back and ensure that your arms and legs are bent at approximately 90°. Your feet should also rest flat on the floor.

It is important that you frequently shift your seating position – to practice the so-called "dynamic sitting" – and that you stand up once in a while.

The Monitor Position

The *ECOMO 21S99* can be tilted and swiveled so that you can set up the monitor position to your liking.

When swiveling or tilting, please support the monitor with both hands

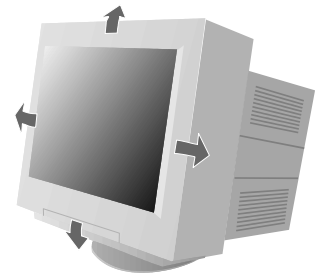

When selecting the monitor position, be sure not to place it directly on the computer housing.

Cleaning your Monitor

When cleaning the monitor, please follow these guidelines:

- Always unplug the monitor before cleaning
- Wipe the screen and cabinet front and sides with a soft cloth
- If the screen requires more than dusting, apply household window cleaner to a soft cloth to clean the monitor screen



Do not use benzene, thinner or any volatile substances to clean the unit as the finish may be permanently marked. Never leave the monitor in contact with rubber or vinyl for an extended period.

Technical Data

CRT	Diagonal	53.34cm / 21", viewable display size 403.8 x 302.2mm, 16 x 12"		
	Gun	In-line		
	Deflection angle	90 °		
	Phosphors	Red, green, blue (P22, medium short persistence)		
	Phosphor color coordinates	RedGreenBlue X = 0.625X = 0.28X = 0.155 Y = 0.34Y = 0.595Y = 0.07		
	Slot mask	0.25 - 0.27 mm		
	Face plate	anti-glare, anti-reflective, anti-static coating		
	Focusing method	Dynamic beam forming		
	Input signal	Video	0.7V RGB analog	
Synchronization		Synchronization signals on green or separate horizontal/ vertical synchronization or composite synchronization		
Interface	Input connector	DB9-15P and 5-pin BNC		
	Input impedance	75Ω (video) 1kΩ (sync)		
Frequency range	Horizontal: 30 - 96kHz, vertical: 48 - 160Hz			
Resolution	Horizontal: up to 1600 pixels, vertical: up to 1200 lines			
Warm-up time	30min. to reach optimum performance temperature			
Brightness	100cd/m ² , standard full white video			
Video bandwidth	110MHz			
Blanking time	Horizontal	≥ 2.76μs		
	Vertical	≥ 450μs		
Viewable display	388 x 291 mm			
Color temperature	9300K	6500K	5000K	Gamma value (γ) = 2.5
	X = 0.283 ± 0.02	X = 0.313 ± 0.02	X = 0.346 ± 0.02	
	Y = 0.298 ± 0.02	Y = 0.329 ± 0.02	Y = 0.359 ± 0.02	
Power supply	AC 100-120 V/220-240 V; 10 %, 50-60 Hz, 160 W (typical)			
Operating environment	Temperature	10° - 40°C		
	Humidity	10 - 80 % relative air humidity		
Housing	498 x 505 x 474mm (WxHxD)			
Weight	31 kg approx.			
Tilt/ swivel base	Tilt angle	-5° - +15°		
	Swivel angle	± 90°		
Approvals/ certifications	Safety (CE)	EN 60950		
	EMC (CE/FCC)	EN 55022 Class B, EN 50082-1, EN 60555-2 FCC Class B (FCC-ID: AK8GDM500PS)		
	X-radiation	German X-ray regulations dated 1987-01-08		
	Others	TCO '95 VESA DPMS EPA Energy Star MPR-II ISO 9241-3 (certified by TÜV Ergonomie) ZHI/618 NUTEK Spec. 803299/94		

Power Management Function

The *ECOMO 21S99* complies with the guidelines set by VESA and Energy Star together with the stringent standards of NUTEK. The *ECOMO 21S99* will automatically reduce power consumption in three stages if the monitor is connected to a graphics board complying with VESA DPMS. You can set the delay time before the monitor enters the power saving mode using the on-screen menu (→page 15).

The following table gives you an overview.


Mode	Synchronization Signal		Power Consumption	Recovery Time	Power Indicator
	Horizontal	Vertical			
Stand-by mode	no	yes	≤ 100 W	approx. 3 sec	alternating green and orange
Suspend mode	yes	no	≤ 15 W	approx. 3 sec	alternating green and orange
Active-off mode	no	no	≤ 5 W	approx. 10 sec	Orange

Factory Settings

To minimize the need for adjustment, the factory has preset popular display standards into the monitor. Picture size and centering are automatically adjusted if any of these display standards is detected. All the factory presets may be overwritten by adjusting the user controls. The monitor is capable of automatically storing up to 15 additional display standards. The new display information must differ from any of the existing display standards by at least 1 kHz for the horizontal scan frequency or 5 Hz for the vertical scan frequency or the sync signal polarities must be different.

The VGA D-Shell Socket


Pin Assignment

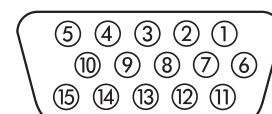

Connection	Signal	Connection	Signal
1	Red	9	+5 V
2	Green	10	Sync ground
3	Blue	11	Monitor ID2
4	Monitor ID0	12	Bidirectional data (SDA, DDC1/2B)
5	DDC ground	13	Horizontal synchronization
6	Red ground	14	Vertical synchronization
7	Green ground	15	Data timing (SCL, DDC2B)
8	Blue ground		

The *ECOMO 21S99* issues analog signals in accordance with the requirements of Guideline RS-170. The synchronization information is sent separately.

Video Input Connection to an Apple-Macintosh Computer

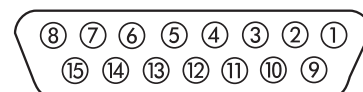

Pin Assignment

Pin	Signal	Pin	Signal
1	Red ground	9	BLUE Video
2	RED video	10	Sense 2
3	C-sync	11	C & V sync Ground
4	Sense 0	12	V-sync
5	GREEN video (mono video)	13	Blue ground
6	Green ground	14	H-sync Ground
7	Sense 1	15	H-sync
8	Not used		

H-sync = scan frequency, V-sync = Refresh rate

Troubleshooting



Problem Solving

What happened		What you can do
No picture	If the power indicator is not lit	Check that the power cord is properly connected and the monitor is switched on.
	If the 'No INPUT signal' display comes up, the power indicator lights up orange or alternates between orange and green	<p>The screen is dark when the power saving function is active. Press any key on the front of the monitor</p> <p>Check that the correct video input is activated.</p> <p>Check the video cable connection. The plug should be securely and fully inserted in the graphics board socket.</p> <p>Check that the BNC connectors are connected in the correct order.</p> <p>Check the HD15 plug for damaged contact pins.</p> <p>Check that the graphics board is firmly seated in its slot.</p>
	If the 'Out of scan range' message is displayed on the monitor	The signal frequency must be within the permitted range (horizontal: 30 - 107kHz, vertical: 48 - 160kHz)
		If you are using an adapter, this may be contributing to the cause of the problem.
	If the screen remains blank and the power indicator lights up green or flashes orange	(→page 25)
The picture is distorted		Check in the manual for your graphics board that the monitor settings are correct.
		Check that the graphics mode and frequency selected are supported. Try lowering the video signal frequency even if the video signal is within the permitted frequency band.
The colors lack uniformity		<p>Degauss the monitor</p> <p>This phenomenon can arise if you place equipment which generates a magnetic field near the monitor (e.g. loud-speakers or halogen lamps) or if you change the position of the monitor. Wait approx. 20 seconds if you need to degauss the monitor a second time.</p>
The monitor cannot be adjusted using the buttons		This may occur if the keyboard lock is activated. You can find out how to release the lock on page 15.
The background white is too dark		Check that the monitor is connected using a 5-pin BNC cable and that the plugs are connected in the correct order (from left to right: Red-Green-Blue-HD-VD).

What happened	What you can do
The picture bounces or has wavy oscillations	Ensure that there are no sources of magnetic interference near the monitor (e.g. electric fans, halogen lamps or laser printers).
	If you are using a second monitor, increase the distance between the two monitors.
	Try plugging the monitor into a different AC outlet.
The picture is flickering	Increase the refresh rate of the graphics board. You will find information on this in the documentation accompanying your graphics board.
The picture appears to be ghosting	Avoid using of switch boxes or cable extensions. Long cable extensions or poor contacts may be causing this fault.
A hum is heard as soon as the monitor is switched on	The monitor is automatically degaussed every time it is switched on. This process lasts approx. 3 seconds, during which a hum may be heard. The same hum is heard even when the monitor is degaussed manually.

On-Screen Messages

The *ECOMO 21S99* can take care of itself. The following on-screen message will appear if there is no sync signal:

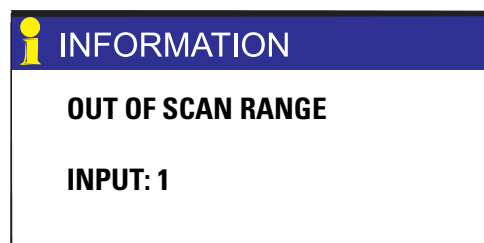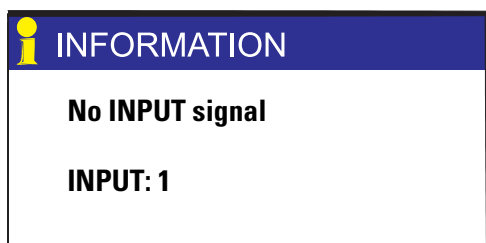


It may however be that the signal frequency is outside the permitted range. The message will appear in the second window if this is the case.

The number following 'INPUT' indicates which monitor input is receiving no signal or the wrong signal. The message will alternate INPUT '1' (HD15) and INPUT '2' (5BNC) if both monitor inputs are receiving no signal or the wrong signal.

Self-Diagnosis Function of the Monitor

The *ECOMO 21S99* is equipped with a self-diagnosis function. The screen will remain blank and the power indicator will either light up green or flash orange if there is a problem with the monitor or the graphics board.

If the Power Indicator Lights Up Green

Firstly switch off any computers connected or disconnect the plugs from the graphics inputs. Now press button  for approx. 2 seconds.

All four color bars will now appear (white, red green blue) on screen if the monitor is working properly. If not, then the monitor is faulty. You should contact ELSA-Support in this event (→page 30).

If the Power Indicator Flashes Orange

Switch off the monitor. The monitor is faulty if the indicator continues to flash as before. Make a note of the flash interval and inform ELSA Support (→page 30).

Appendix



TCO '95 -

Ecological Requirements for Personal Computers

Congratulations! You have just purchased a TCO '95 approved and labeled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and to the further development of environmentally adapted electronic products.

Why do we have Environmentally-Labeled Computers ?

In many countries, environmental labeling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem as far as computers and other electronic equipment are concerned is that environmentally harmful substances are used both in the products and during their manufacture. Since it has not been possible so far for the majority of electronic equipment to be recycled in a satisfactory way, most of these potentially damaging substances sooner or later enter Nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from both the working and natural environment viewpoints. Since all types of conventional electricity generation have a negative effect on the environment (acidic and climate-influencing emissions, radioactive waste, etc.) it is vital to conserve energy. Electronic equipment in offices consumes an enormous amount of energy, since it is often routinely left running continuously.

What does Labeling Involve ?

This product meets the requirements for the TCO '95 scheme, which provides for international environmental labeling of personal computers. The labeling scheme was developed as a joint effort of the TCO (The Swedish Confederation of Professional Employees), Naturskyddsforeningen (The Swedish Society for Nature Conservation) and NUTEK (The National Board for Industrial and Technical Development in Sweden).

The requirements cover a wide range of issues: environment, ergonomics, usability, emission of electrical and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands concern among other things restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons), and chlorinated solvents. The product must be prepared for recycling and the manufacturer

is obliged to have an environmental plan, which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display after a certain period of inactivity shall reduce its power consumption to a lower level, in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Labeled products must meet strict environmental demands, for example in respect of the reduction of electric and magnetic fields, along with physical and visual ergonomics and good usability.

You will find a brief summary of the environmental requirements met by this product below. The complete environmental criteria document may be ordered from:

- TCO Development Unit
11494 Stockholm
Sweden
Fax: +46-87829207
EMail (Internet): development@tco.se
<http://www.tco-info.com/>

Environmental Requirements

brominated flame retardants are present in printed circuit boards, cabling, casings and housings, and are added to delay the spread of fire. Up to 30 % of the plastic in a computer casing can consist of flame-retardant substances. These are related to another group of environmental toxins, PCB, and are suspected of giving rise to similar harm, including reproductive damage in fish-eating birds and mammals. Flame retardants have been found in human blood and researchers fear that they can disturb fetus development. Bio-accumulative* TCO '95 demands require that plastic components weighing more than 25 grams must not contain flame retardants with organically bound chlorine or bromine.

- **Lead** – can be found in picture tubes, display screens, solder and capacitors. Lead damages the nervous system and higher doses causes lead poisoning. The relevant bio-accumulative* TCO '95 requirement permits the inclusion of lead, as no replacement has yet been developed.
- **Cadmium** – is present in rechargeable batteries and in color-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant bio-accumulative* TCO '95 requirement states that batteries may not contain more than 25 ppm (parts per million) of cadmium. The color-generating layers of display screens must not contain any cadmium.
- **Mercury** – is sometimes found in batteries, relays and switches. Mercury damages the nervous system and is toxic in high doses. The relevant bio-accumulative* TCO

'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of mercury. The relevant bio-accumulative* TCO '95 demands require that no mercury is present in any of the electrical or electronic components concerned with the display unit.

- **CFCs (Freons)** – are sometimes used for washing printed circuit boards and in the manufacture of expanded foam for packaging. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on Earth of ultra-violet light with consequent increased risks of skin cancer (malignant melanoma). The relevant TCO '95 requirement: Neither CFCs nor HCFCs may be used during manufacture of the product or its packaging.

* Bio-accumulative is defined as substances which accumulate within living organisms.

Advice and Help

If you encounter any problems during the installation or operation of your ELSA product, please consult this manual first.

If you have further questions, you can contact our Support team. Ensure that you can provide the following information.

- Exact model name of your ELSA monitor.
- The type of graphics board and the BIOS version (displayed when starting the computer).
- Operating system and hardware environment.

Software Updates

The latest versions of the ELSA software are always available for download from our Internet WWW site www.elsa.de and direct via FTP from [ftp.elsa.com](ftp://ftp.elsa.com). You will also find a wealth of information and answers to frequently asked questions (FAQs). Before you contact the ELSA Support team, please make sure that you are using the latest ELSA software (driver, firmware or INF file) versions.

Who to Contact?

First you should contact the dealer where you bought your ELSA product. If there are still questions remaining, contact one of the following:

■ ELSA on the Internet

ELSA WWW site

www.elsa.de

■ ELSA by Mail

Or write to ELSA

ELSA AG
Computer Graphics Support
Sonnenweg 11
52070 Aachen
Germany

If you are not sure whether your product is defective or if the problem is just a driver which is incorrectly installed, please call the ELSA Support hotline before you send the board for repair.

■ ELSA Support Hotline

+49-241-606-6135

Mondays to Fridays from 9.00 am until 5.00 pm (CET)



If you have any questions about the ELSA ServiceDirect program or the progress of your repair, please call.

■ **ELSA Service Hotline** **+49-241-6065112**

■ **ELSA World Wide**

You can contact the ELSA subsidiaries:

ELSA, Inc.

2231 Calle De Luna
Santa Clara, CA 95054
USA

Phone: +1-408-919-9100
+1-800-272-ELSA
Fax: +1-408-919-9120

ELSA Asia, Inc.

7F-11, No. 188, Sec. 5
Nanking East Road
Taipei 105
Taiwan, R.O.C.

Phone: +886-2-27685730
Fax: +886-2-27660873

ELSA Japan, Inc.

Mita Suzuki Building 3F
5-20-14 Shiba, Minato-ku
Tokyo 108-0014
Japan

Phone: +81-3-5765-7391
Fax: +81-3-5765-7235

ELSA-ServiceDirect for *ELSA ECOMO*[™] Monitors

3-Year Warranty Including ELSA-Onsite

As of the purchase date 01.01.1998, ELSA grants a three-year warranty on *ELSA ECOMO*¹⁾ monitors including ELSA-ServiceDirect. ELSA strives to offer its customers top product quality with its extensive quality assurance measures. If, however, the customer makes a complaint, this service program guarantees perfect support and repair procedures to minimize any inconvenience. As well as repairs carried out free of charge, the following ServiceDirect services are offered within the extended scope of the warranty.

ELSA-Onsite: 3 years of onsite service for ELSA monitors—free of charge

You can avail of the numerous advantages of our onsite services for *ELSA ECOMO* monitors throughout Europe²⁾. If you discover a fault with your monitor, you first contact our support team. If your monitor requires repairs within the warranty period of three years, you are provided with a replacement unit within 24 hours³⁾ which we deliver to your workplace. Your repaired monitor will be returned to you as soon as possible. The advantage of this offer is that you have no downtime or transport expenses. ELSA's customer service ensures that all transporting procedures are dealt with in the correct manner.

Your direct contact partner at ELSA-ServiceDirect

As an ELSA customer, you will receive support and advice from ELSA's customer service at all stages of the warranty services being carried out.

The ELSA support hotline is the first number to dial if you discover a malfunction or fault on your monitor.

If you have general questions on ServiceDirect, on the progress of repair work, contact the ELSA service hotline.

ELSA Monitor Support Hotline
+49-(0)241-606-6135

ELSA Service Hotline
+49-(0)241-606-5112

1) Applies to all *ELSA ECOMO* monitors purchased after January 1, 1998.

2) For *ELSA ECOMO 21H97*, a 4 week DoA warranty is granted outside of Germany instead.

3) Provided that the complete documentation reaches the ELSA support team by 11.00 a.m. by mail or directly via the computer graphics faxline—Tel.: +49-(0)241-606-6399. Please note that warranty services are only granted for faults which are covered within the framework of our General Terms of Warranty, valid for the Federal Republic of Germany (refer to our Internet site: www.elsa.com).

If the ELSA service cannot find fault with the unit claimed to be defective, we will invoice you for DM 200 plus V.A.T. to cover inspection costs and replacement of the unit.

Warranty Conditions

The ELSA AG warranty, valid as of 01.01.98, is given to purchasers of ELSA products in addition to the warranty conditions provided by law and in accordance with the following conditions:

1 Warranty Coverage

- a) The warranty covers the equipment delivered and all its parts. Parts will, at our sole discretion, be replaced or repaired free of charge if, despite proven proper handling and adherence to the operating instructions, these parts became defective due to fabrication and/or material defects. Also we reserve the right to replace the defective product by a successor product or repay the original purchase price to the buyer in exchange to the defective product. Operating manuals and possibly supplied software are excluded from the warranty.
- b) Material and service charges shall be covered by us, but not shipping and handling costs involved in transport from the buyer to the service station and/or to us.
- c) Replaced parts become property of ELSA.
- d) ELSA are authorized to carry out technical changes (e.g. firmware updates) beyond repair and replacement of defective parts in order to bring the equipment up to the current technical state. This does not result in any additional charge for the customer. A legal claim to this service does not exist.

2 Warranty Period

The warranty period for ELSA products is six years. Excepted from this warranty period are ELSA CRT color monitors and ELSA video conferencing systems with a warranty period of 36 months. Also excepted are the ELSA TFT Monitors with a warranty period of 12 months. This period begins at the day of delivery from the ELSA dealer. Warranty services do not result in an extension of the warranty period nor do they initiate a new warranty period. The warranty period for installed replacement parts ends with the warranty period of the device as a whole.

3 Warranty Procedure

- a) If defects appear during the warranty period, the warranty claims must be made immediately, at the latest within a period of 7 days.
- b) In the case of any externally visible damage arising from transport (e.g. damage to the housing), the transport company representative and ELSA should be informed immediately. On discovery of damage which is not externally visible, the transport company and ELSA are to be immediately informed in writing, at the latest within 7 days of delivery.
- c) Transport to and from the location where the warranty claim is accepted and/or the repaired device is exchanged, is at the purchaser's own risk and cost.
- d) Warranty claims are only valid if the original purchase receipt is returned with the device.

4 Suspension of the Warranty

All warranty claims will be deemed invalid

- a) if the device is damaged or destroyed as a result of acts of nature or by environmental influences (moisture, electric shock, dust, etc.),
- b) if the device was stored or operated under conditions not in compliance with the technical specifications,

- c) if the damage occurred due to incorrect handling, especially to non-observance of the system description and the operating instructions,
- d) if the device was opened, repaired or modified by persons not authorized by ELSA,
- e) if the device shows any kind of mechanical damage,
- f) if in the case of an ELSA Monitor, damage to the cathode ray tube (CRT) has been caused especially by mechanical load (e.g. from shock to the pitch mask assembly or damage to the glass tube), by strong magnetic fields near the CRT (colored dots on the screen), or through the permanent display of an unchanging image (phosphor burnt), or
- g) if the warranty claim has not been reported in accordance with 3a) or 3b).

5 Operating Mistakes

If it becomes apparent that the reported malfunction of the device has been caused by unsuitable software, hardware, installation or operation, ELSA reserves the right to charge the purchaser for the resulting testing costs.

6 Additional Regulations

- a) The above conditions define the complete scope of ELSA's legal liability.
- b) The warranty gives no entitlement to additional claims, such as any refund in full or in part. Compensation claims, regardless of the legal basis, are excluded. This does not apply if e.g. injury to persons or damage to private property are specifically covered by the product liability law, or in cases of intentional act or culpable negligence.
- c) Claims for compensation of lost profits, indirect or consequential detriments, are excluded.
- d) ELSA is not liable for lost data or retrieval of lost data in cases of slight and ordinary negligence.
- e) In the case that the intentional or culpable negligence of ELSA employees has caused a loss of data, ELSA will be liable for those costs typical to the recovery of data where periodic security data backups have been made.
- f) The warranty is valid only for the first purchaser and is not transferable.
- g) The court of jurisdiction is located in Aachen, Germany in the case that the purchaser is a merchant. If the purchaser does not have a court of jurisdiction in the Federal Republic of Germany or if he moves his domicile out of Germany after conclusion of the contract, ELSA's court of jurisdiction applies. This is also applicable if the purchaser's domicile is not known at the time of institution of proceedings.
- h) The law of the Federal Republic of Germany is applicable. The UN commercial law does not apply to dealings between ELSA and the purchaser.

Index

- **B**
 - Barrel Distortion 11
 - Brightness 11
- **C**
 - CE 3
 - Color temperature 14
 - Contrast 11
- **D**
 - D socket 20
 - DDC 2
 - Driver 30
 - Dynamic focus 1
- **F**
 - FCC 3
- **G**
 - Graphics modes 1
- **I**
 - Internet 30
- **K**
 - Key balance 12
 - Keyboard lock 15
- **L**
 - Lock 15
- **M**
 - Moiré 12
 - Monitor Position 18
- Multi-Mode technology 1
- **O**
 - On Screen Display 1, 5
 - On-Screen Display 5
 - On-screen messages 25
- **P**
 - Picture Position 11
 - Picture rotation 12
 - Picture Size 11
 - Picture slant 12
 - Pin assignment 20, 21
 - Pincushion 11
 - Power Management 2, 15
 - Power management 20
 - Preset memory 20
- **S**
 - Self-diagnosis 25
 - Signal frequency 25
 - Support 30
 - Support hotline 30
 - Sync signal 25
- **T**
 - TCO '95 1
 - Trapezium balance 12
 - Trapezoidal Distortion 12
- **W**
 - WWW 30